Technical Manual

Entra Two

Infinity

ACOUSTIC & ELECTRICAL SPECIFICATIONS:

- Nominal Impedance: 8Ω
- Max Amp Power 125 watts*
- Frequency Response 50Hz - 20,000Hz (±3dB)
- Sensitivity: 90dB (2.83V @ 1 meter)
- Crossover Frequency: 2500Hz; 24dB/octave

SYSTEM COMPONENTS:

- Cabinet ENTRA TWO (Not for Sale)
- Grille, Gray 336416-001
- Low-Frequency Transducer: 6-1/2" (165mm) C.M.M.D., magnetically shielded (336418-001)

  DC Resistance 4.5 ohms ±10%
- High-Frequency Transducer: 3/4" (19mm) C.M.M.D., magnetically shielded (336417-001)

  DC Resistance 3.3 ohms ±10%
- Crossover Network 338962-002

AURAL SWEEP TEST SPECIFICATIONS:

- System Aural Sweep Test 6.0V Input 50 Hz to 20 kHz
- L.F. Aural Sweep Test 5.0V Input 50 Hz to 3 kHz
- H.F. Aural Sweep Test 2.83V Input 2 kHz to 20 kHz

PHYSICAL SPECIFICATIONS:

- Enclosure dimensions: 31-3/4" x 8-1/2" x 9-3/4" (806mm x 216mm x 248mm)
- Weight 24 lbs (11 kg) each

WARRANTY:

- Refer to Warranty Statement packed with each product.

* The maximum recommended amplifier power rating will ensure proper system headroom to allow for occasional peaks. We do not recommend sustained operation at these maximum power levels.

PACKING

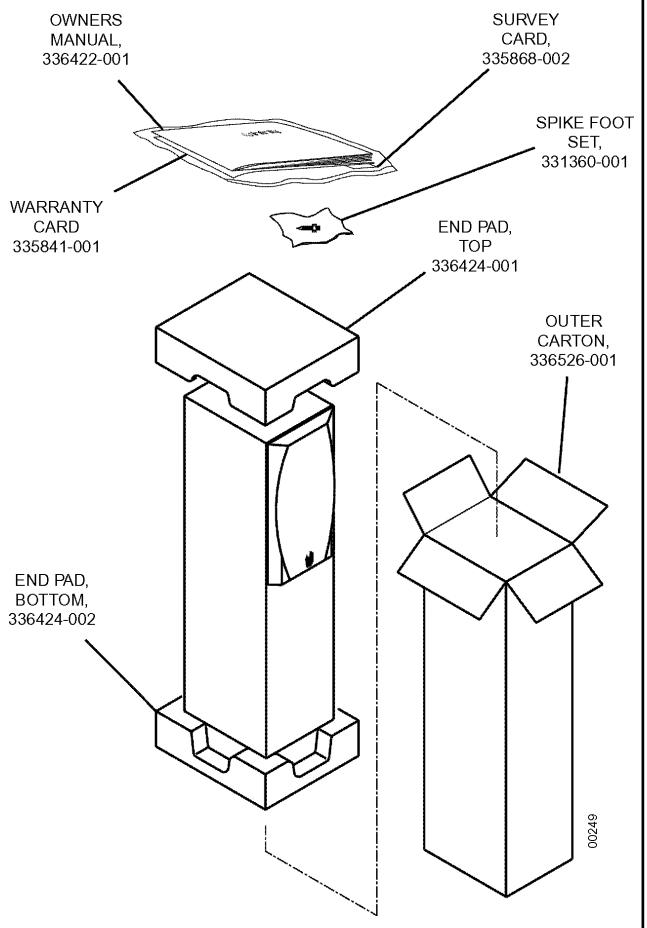

WIRING DIAGRAM

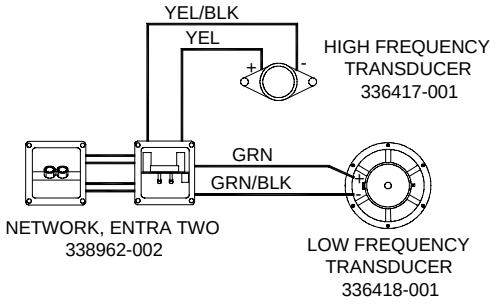

ENTRA TWO SCHEMATIC

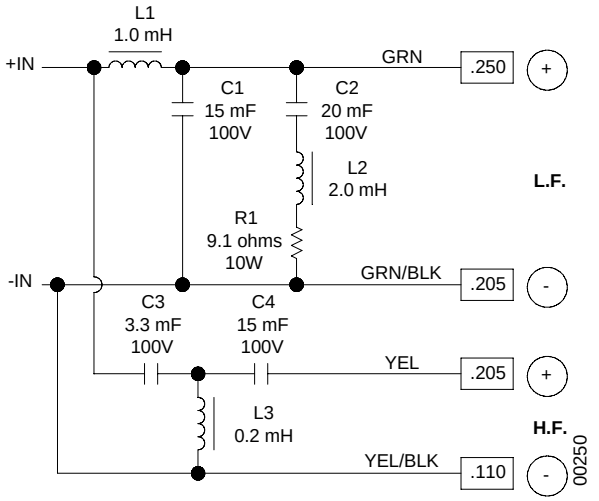

Entra Two

Technical Manual

Entra Two

EXPLODED VIEW

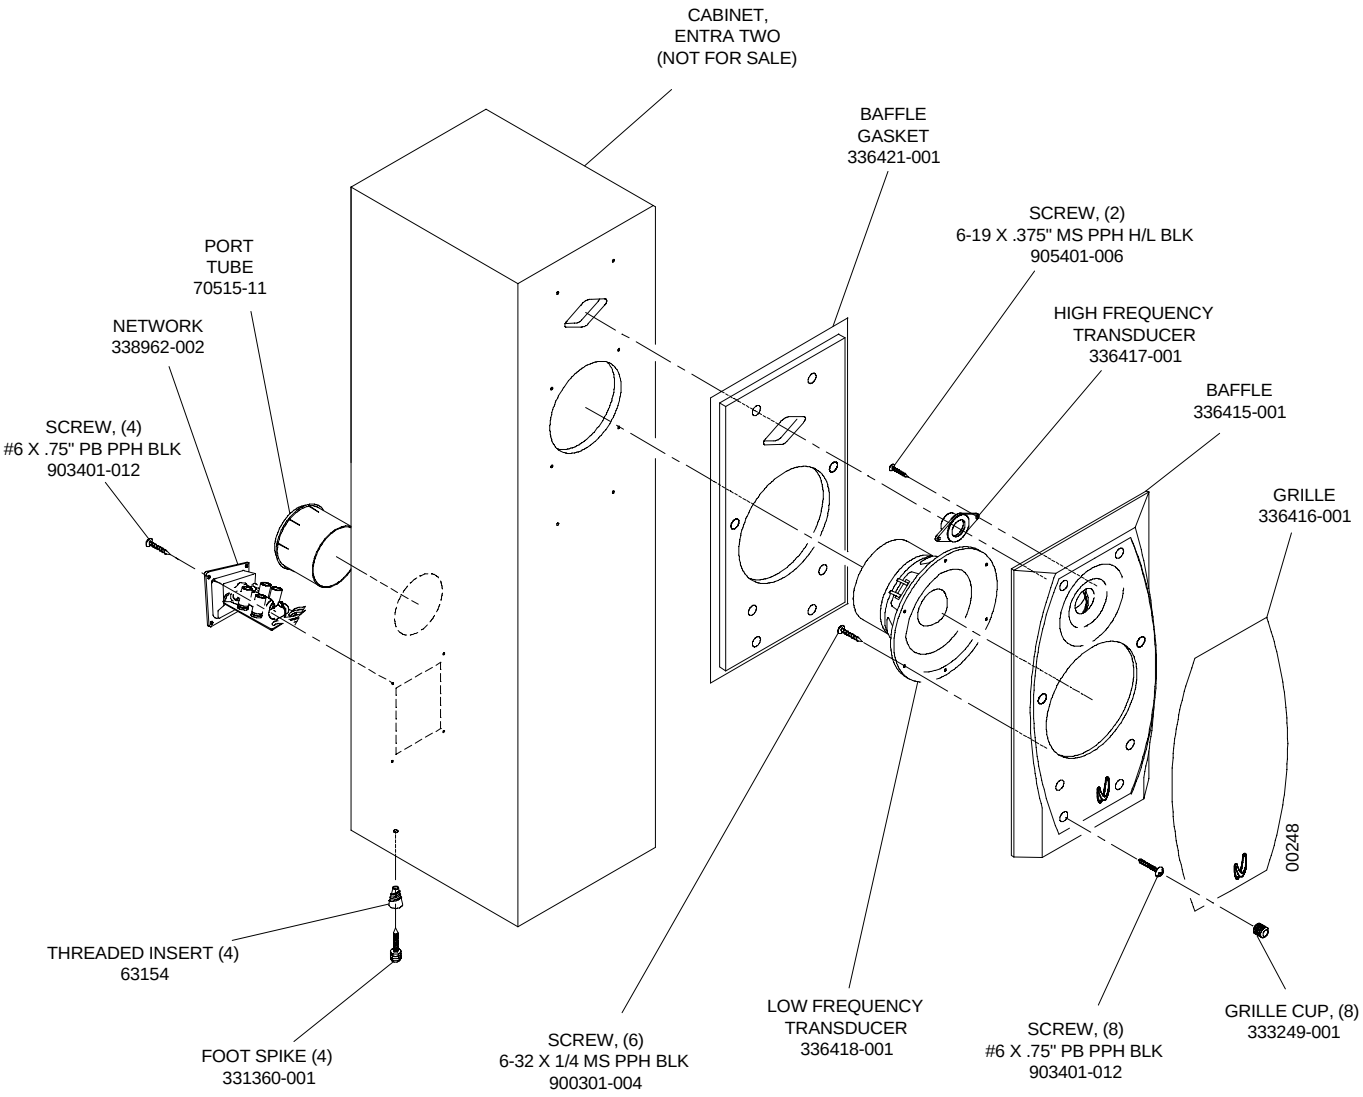

TO SERVICE THE ENTRA TWO

1. Remove the grille.
2. Remove all (8) rubber grille retainers; this can be accomplished by carefully pulling them out of their cavities with long-nosed pliers or similar tool.
3. Remove the (8) Phillips screws that are now exposed.
4. Carefully lift the front baffle, with tweeter attached, off the cabinet.
5. If necessary, remove all of the Phillips screws holding the woofer to the cabinet.